

EN

PREMIUM BT

 
"Quick reference guide"

ES

PREMIUM BT

"Guía de referencia rápida"



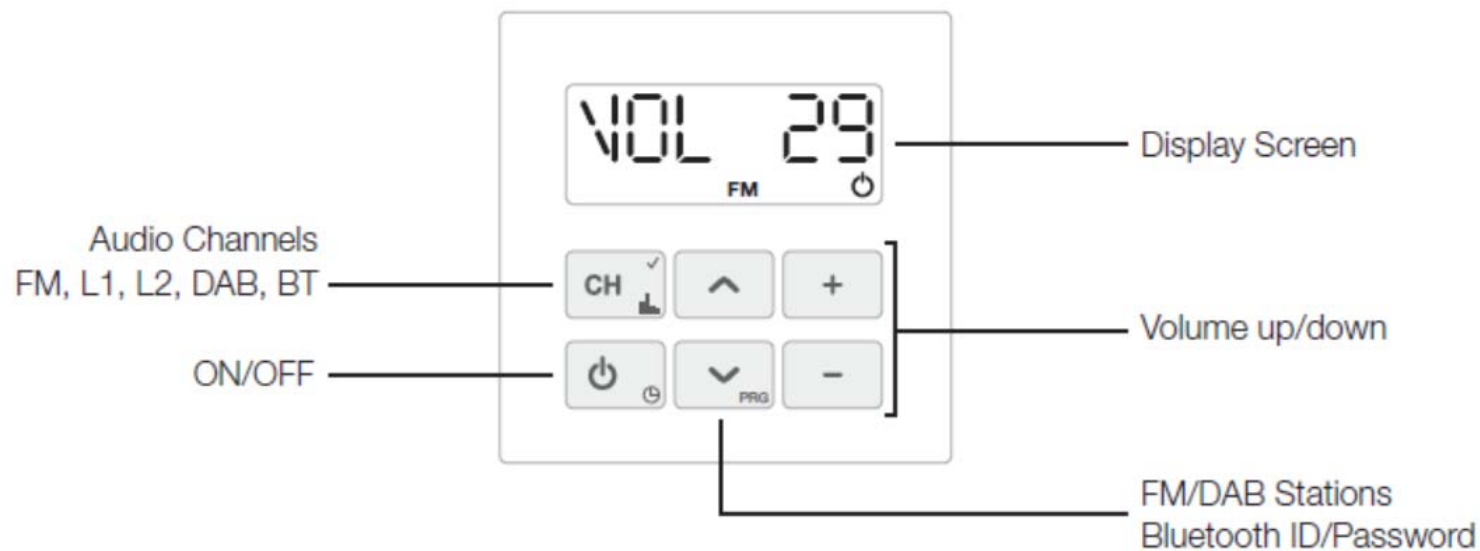


1. Installation Menu

Please take note that the **PREMIUM BT** Unit must be in OFF mode.

1.1. Activate installation Menu

 Press the keys for 6 seconds

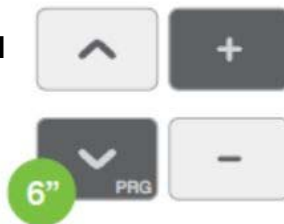

1. Menú de Instalación

Por favor tenga en cuenta que el mando **PREMIUM BT** esté apagado.

1.1. Active el Menú de instalación

Pulse durante 6 segundos las teclas

1.2. Installation Menu Options

1.2. Opciones Menú de Instalación



Installation Menu Menú Instalación	I N S
Language Idioma	E N G E S P F R A G E R
Auto ON/OFF	A U T O N A U T O F F
Stereo/Mono	S T R E O M O N O
Audio Output Salida Audio	8 O H M 16 O H M L I N E A M P 1 A M P 2
Balance	B A L - 1 5 B A L + 1 5 M A X 0 0
Volume Limit Limite Volumen M A X 9 9
Menu Look Bloqueo Menú	L O K U N L O K
L1 Enable Activar L1	L 1 O N L 1 O F F
L2 Enable Activar L2	L 1 O N L 1 O F F
FM Enable Activar FM	F M O N F M O F F


L1 Stereo/Mono	L 1 M O N L 1 S T L 1 M I X
L2 Stereo/Mono	L 2 M O N L 2 S T L 2 M I X
L1 Input Level Entrada L1	N O R M A L P R O F O T H E R
L2 Input Level Entrada L2	N O R M A L P R O F O T H E R
L1 Label Nombre L1	L - I N 1 T V F M - C E N B T - E X
L2 Label Nombre L2	L - I N 2 T V F M - C E N B T - E X
FM Central	L - I N 1 L - I N 2
Terminal 0	C E N T R L
Factory Reset	A M P R E S E T
Version	V E R S

2. User Menu

Please take note that the **PREMIUM BT** Unit must be in OFF mode.

2.1. Activate User Menu

 Press the key for 3 seconds

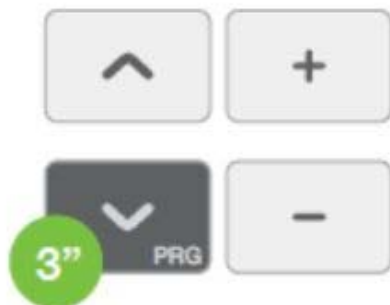

2.2. User Menu Options

2.2. Opciones Menú de Usuario



User Menu

Menú de Usuario	U S E R
FM Mem. Delete	
Borrar Mem. FM	D E L
FM Forced MONO	S T E R E O
FM Recep. MONO	M O N O
	S E N S 1
	S E N S 2
FM Sensitivity	S E N S 3
Sensibilidad FM	
Do not Disturb	N O C A L L
No Molestar	C A L Disturba
	C A L L 0 0
Call Volume
Volumen Avisos	C A L L 9 9

2. Menú de Usuario

Por favor tenga en cuenta que el mando **PREMIUM BT** esté apagado.

2.1. Active el Menú de Usuario

Pulse durante 3 segundos la tecla

Light ON

Luz ON	L O N 1
	..
	L O N 5
DAB Services Scan	
Buscar Servicio DAB	D A B
DAB Memory Delete	
Borrar Memorias DAB	D E L
Time - Hour	
Hora	H 1 2 4 9
Time - Minute	
Minutos	1 2 M 4 9

3. Keyboard shortcuts

Please take note that the **PREMIUM BT** Unit must be in ON mode.

3. Accesos directos

Por favor tenga en cuenta que el mando **PREMIUM BT** esté encendido.

3.1. Program/Delete FM/DAB Memory

Audio Channel: FM/DAB

 


3.2. Set/Save deal Mode



3.3. Access Bluetooth ID/Password

Audio Channel: BT

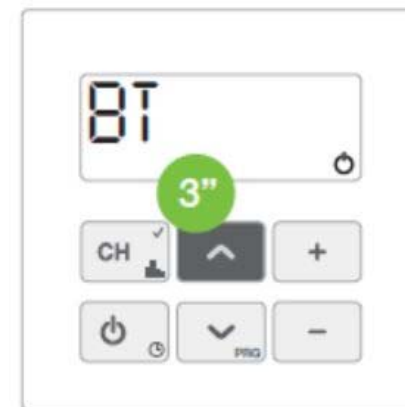

Bluetooth ID



Bluetooth Password

3.4. Equalization Mode



3.5. FM Fine Tuning

Audio Channel: FM



3.6. Timer



3.7. FM Forced MONO ON/OFF

Audio Channel: FM



3.8. BT/A2DP Disconnect

Audio Channel: BT



3.9. BT/BLE Disconnect

Audio Channel: BT



4. KBSOUND STAR App

The PREMIUM BT can also be controlled by our KBSOUND STAR App making the unit especially attractive and versatile. Available on Apple App Store (iOS devices) and Google Play (Android devices). Please make sure it is the latest App version. Compatible for iOS 10.0, Android 8.0 and subsequent related versions.



iOS Devices



Tap the Apple App Store to download the KBSOUND STAR App.

Android Devices



 
Tap the Google Play Store to download the KBSOUND STAR App.



Reference guide

5. Basic installation

5. Instalación Básica

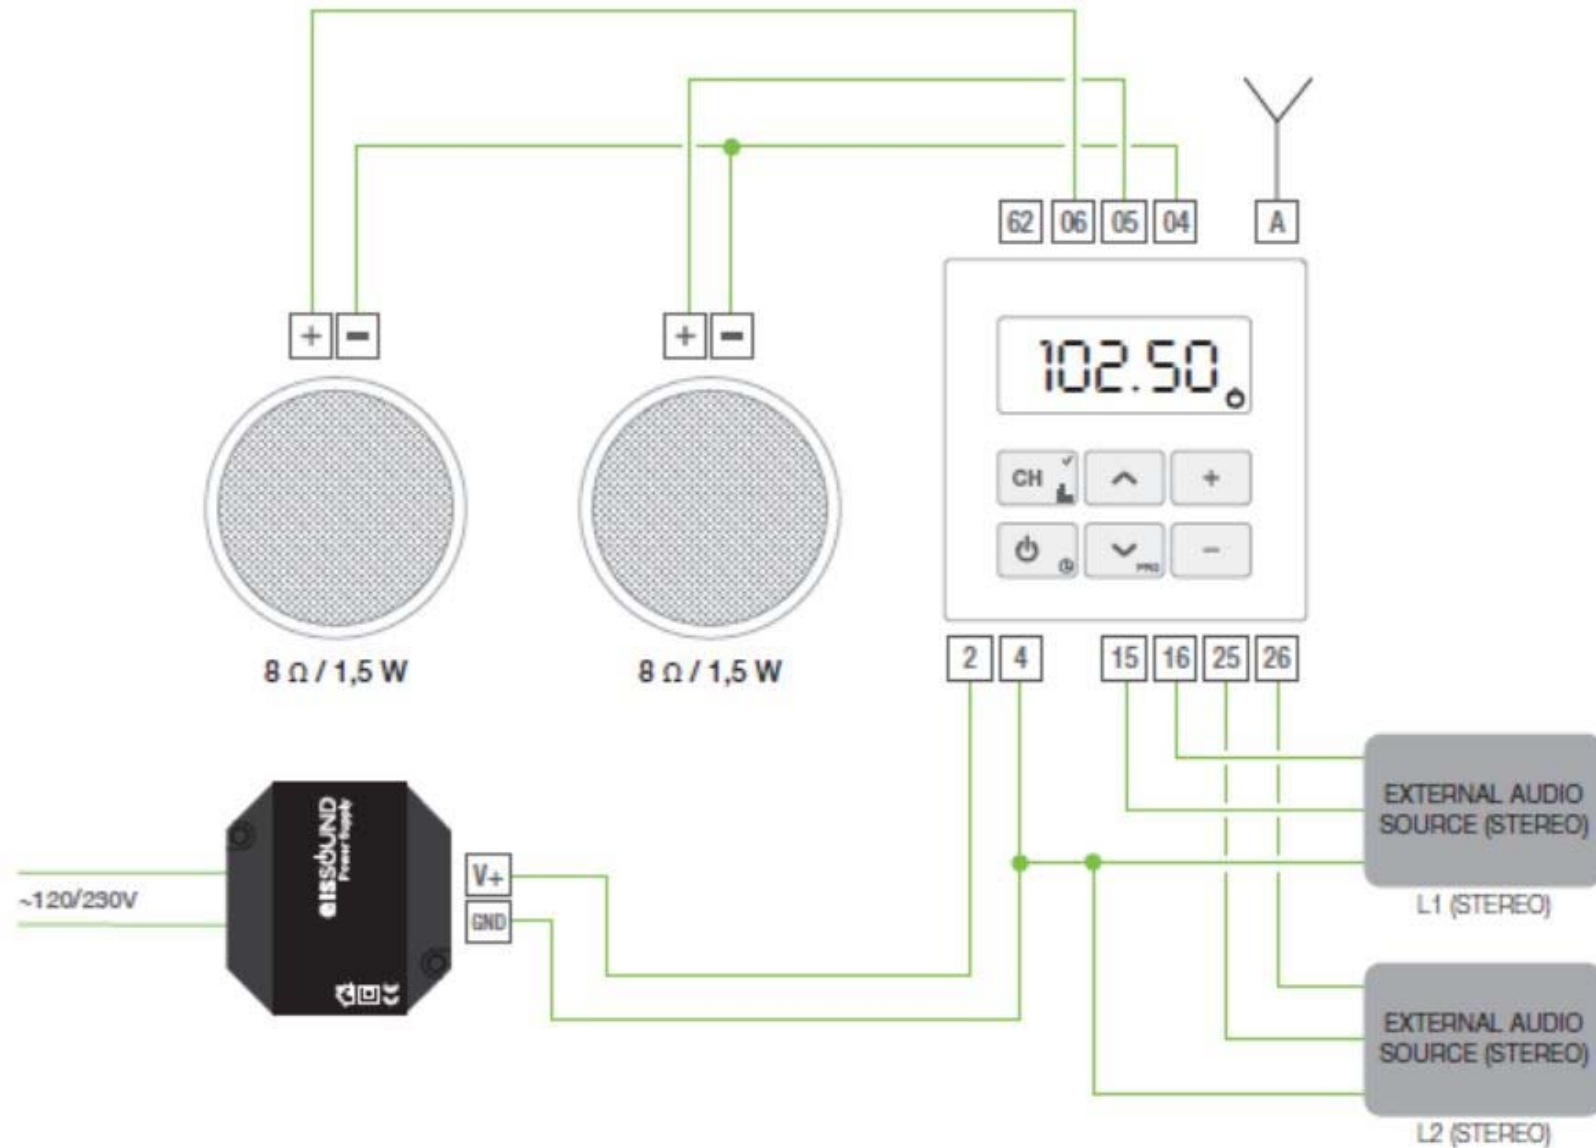

eissound

Pol. Malpica - Grupo Quejido 87-88
50016 Zaragoza - SPAIN
Tel. +34 976 46 55 50 Fax +34 976 46 55 59
marketing@eissound.com
www.eissound.com

KBSOUND

6550 St. Augustine Rd. Suite 305
Jacksonville, FL 32217 (USA)
info@kbsound.com
www.kbsound.com